



HC690437 [Front Crankshaft Seal & Sleeve]

Instruction Guide

Due to tolerances in the sleeves and pulleys, press the sleeve flush with the step

