



# JOHN DEERE HYDRAULIC PUMPS

Instruction Guide



<b>R94657, R94657N, R94657NH</b>	<b>2.4 CI</b>		
<b>R94660, R94660N, R94660NH</b>	<b>3 CI</b>	<b>R94659, R94659N, R94659NH</b>	<b>3 CI</b>
A. Suction	1-1/16"	A. Suction	1-1/16"
B. Suction	1-5/8"	B. Suction	plugged or no port
C. Pressure Port	7/8"	C. Pressure Port	7/8"
D. Cooler Port	7/8"	D. Cooler Port	7/8"
<b>R94658N</b>	<b>3 CI</b>	<b>R94661, R94661N, R94661NH</b>	<b>4 CI</b>
A. Suction	1-1/16"	A. Suction	1-1/16"
B. Suction	1-5/8" or 1-1/16"	B. Suction	1-1/16"
C. Pressure Port	1-1/16"	C. Pressure Port	1-1/16"
D. Cooler Port	7/8"	D. Cooler Port	7/8"

- R94660, R94660N or R94660NH can be substituted for R94657, R94657N & R94657NH
- R94659NH can be substituted for R94660, R94660N & R94660NH
- R94660NH w/ 6408-20 Plug can be substituted for R94659, R94659N & R94659NH