




# C86HEZ [EZ Headliner, Black Basketweave Vinyl w/Preformed Plastic, IH 86 & 88 Series]

Instruction Guide

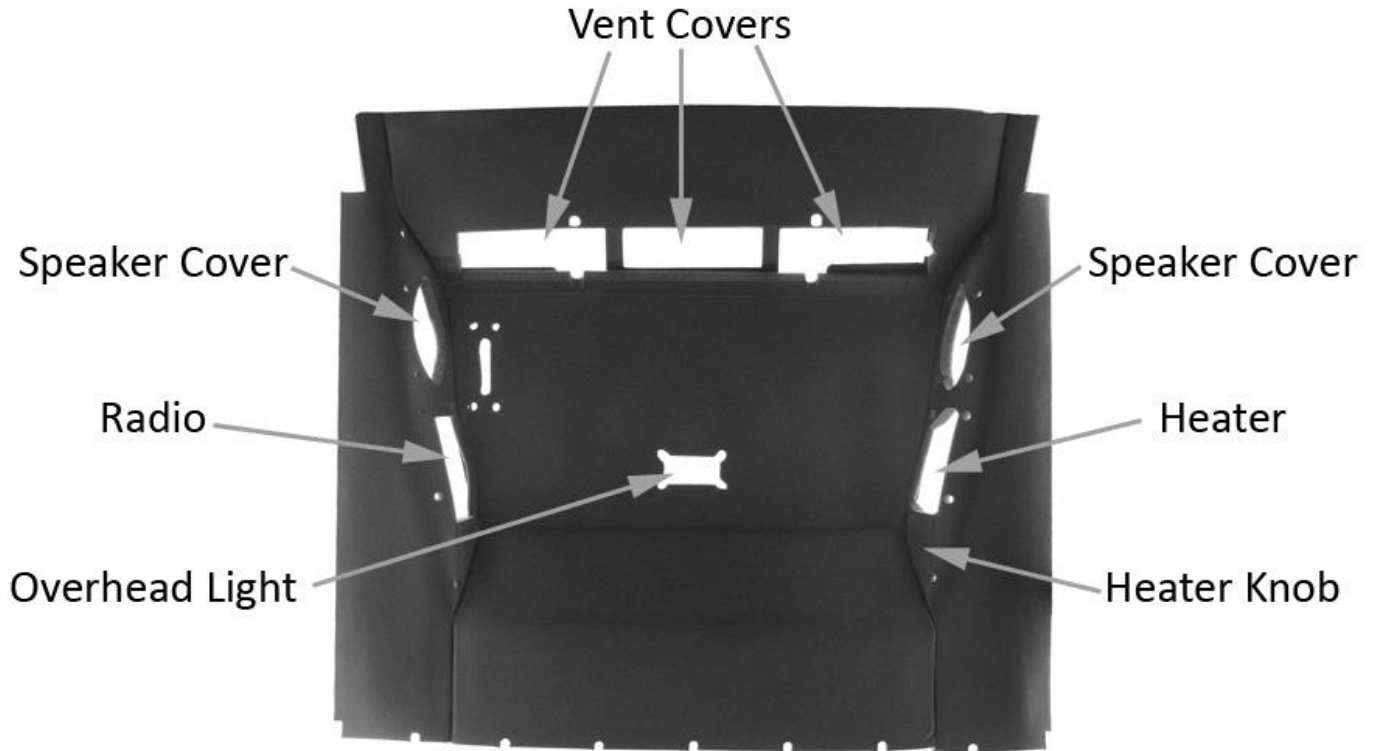

1. Remove the dome light cover, speaker covers, hardware, and outside trim pieces
2. Leaving the fiberglass shell in place, remove old foam and scrape out old glue
3. Vacuum dust, foam, and glue scrapings
4. Carefully remove all  $\frac{3}{4}$ " plastic screw spacers. Should be able to leave the 2" spacers in place
5. Reinstall short plastic screw spacers that are provided. These must be used for proper installation
6. Install heater knob side first to ensure the heater knob does not get damaged
7. Align post and headliner holes for proper positioning
8. Install screws along front and back of headliner
9. Replace dome light cover
10. Replace all covers