



## SA8301394 [Side Kick Seat, Gray Fabric]


Instruction Guide

### Tools Needed:

- 1/2" Wrench
- (2) 9/16" Wrenches
- 7/32" Allen Wrench
- Utility Knife

### Parts Included:

- A. Floor Bracket
- B. Foam Cut Out Template
- C. Magnum Buddy Seat
- D. Aluminum Filler Block
- E. Support Bracket
- F. Instruction Guide
- G. Washers & Nuts

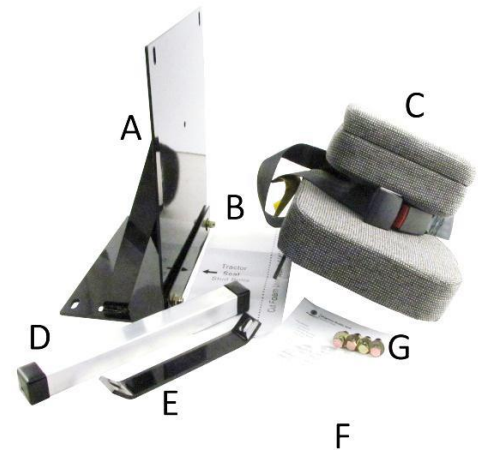

1. Remove OE armrest from bracket (make sure to leave seat belt)
2. Remove nuts and washers from factory seat bolts at floor
3. Using (B) template provided, lift mat, and put template in place. Cut out 1 1/4" foam from under the mat, discard foam
4. Install (D) aluminum filler block under mat and lay mat back down




5. Install (A) Magnum Buddy Seat floor bracket on 2 factory seat bolts. Secure with (G) flat washer and locking nuts



## SA8301394 [Side Kick Seat, Gray Fabric]

### Instruction Guide

6. Install (C) seat and (E) support bracket with (G) bolts provided

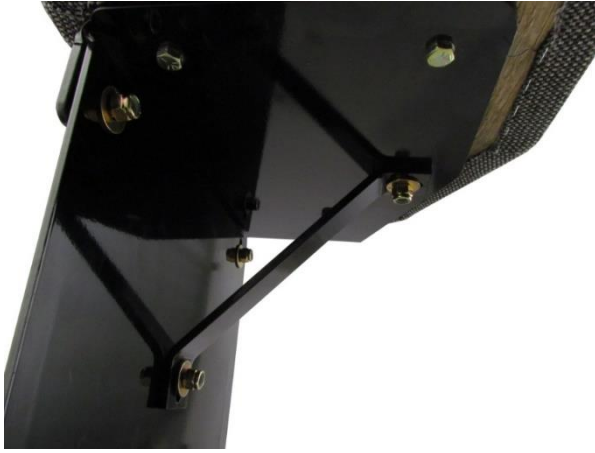

7. Adjust floor support and seat to customer satisfaction
8. Tighten all bolts

