

## CONNECTOR ASSEMBLY




1. Grasp crimped contact approximately 1" behind the contact barrel



2. Hold connector with rear grommet facing you



3. Push contact straight into connector grommet until a click is felt. Slightly tug to confirm that it is properly locked in place.

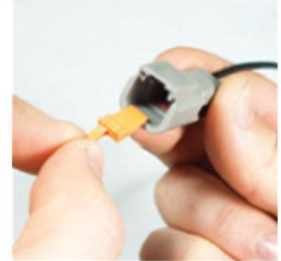

4. Once all contacts are in place, insert orange wedge.

